



MAIN DISPLAY

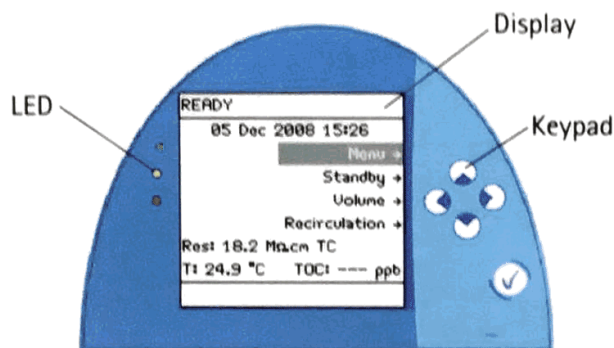


A TOC value is displayed only on a Milli-Q® Reference A+.

Green LED indicates that the system is operating within specifications.


Yellow LED Alert message

- A message is displayed at the bottom line and the yellow LED is blinking.
- The system needs maintenance or sends a warning message. Water quality is still adequate.
- Press  to select the message you want to investigate. Follow the instructions.

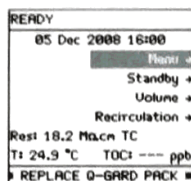


Red LED Alarm message

- A message screen pops up in front of the actual screen and the red LED is blinking.
- The system needs immediate action and water quality may be out of specification.
- Follow the instructions shown on the main display.

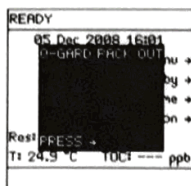


Keypad

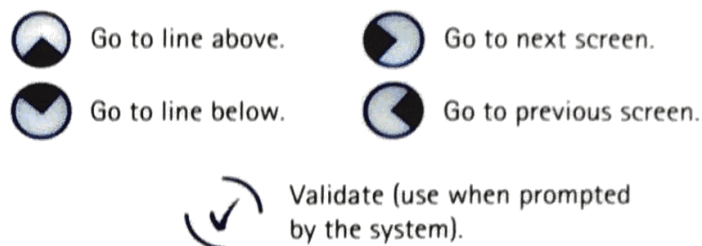


Software modes



- **STANDBY** is used only to access Maintenance and Manager menus.
- **READY** is the normal mode for Milli-Q® water production and delivery. The Milli-Q® system should be left in READY mode during evenings, weekends and other times of non-use.


Recirculation

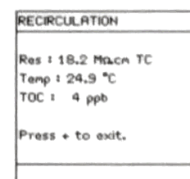Put the cursor on *Recirculation* and press  to start recirculation.




Volumetric dispensing

Put the cursor on *Volume* and press . Use the keypad to choose the desired volume of water to be dispensed. Press  to start dispensing.

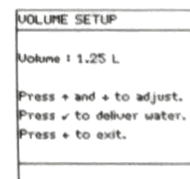

WATER DISPENSING

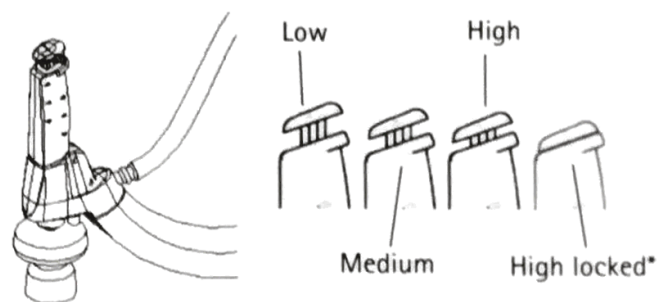

* Push and release the plunger to stop the High locked.